



◆ DIESEL ENGINE SPARE PARTS
(R170A Z170F R175A R180 CF185N CF190 CF192N)

			
A-01 Z170F 机体 Cylinder block	A-02 导风罩 Air director	A-03 Z170F 油箱 Fuel tank	A-04 Z170F 上引风板 Topwind-guide
			
A-05 Z170F 消声器 Silencer	A-06 Z170F 曲轴 Crankshaft	A-07 Z170F 缸罩总成 Cylinder cover assembly	A-08 Z170F 下引风板 Bottom wind-guide
			
A-09 Z170A 连杆瓦 Connecting rod bearing shell	A-10 Z170F 摇臂总成 Rocker arm assy	A-11 Z170F 气门座圈 Valve seat	A-12 Z170F 活塞环 Piston ring
			
A-13 Z170F 柱塞 Plunger	A-14 Z170F 飞轮 Fly wheel	A-15 Z170F 轴承座 Bearing housing	A-16 Z170F 用油圈 Oil slinger
			
A-17 Z170F 飞轮平键 Flywheel key	A-18 Z170F 飞轮罗帽 Flywheel nut	A-19 Z170F 调速拉杆 Governor fork assembly	A-20 Z170F 调速飞锤 Governor fly ball

							
A-21 Z170F 空滤 Air filter	A-22 Z170F 柴滤 Filter assembly	A-23 Z170F 机体后盖 Rear cover	A-24 Z170F 调速把手 Governor handle	A-45 R175A 飞轮 Flywheel	A-46 R175A 油咀顶针 Nozzle thumbstall	A-47 R175A 凸轮轴 Camshaft	A-48 R175A 凸轮轴齿轮 Camshaft gear
							
A-25 Z170F 机油尺 Oil rule	A-26 Z170F 摇把 Starting crank handle	A-27 Z170F 气缸盖(铝) Cylinder head(Aluminum)	A-28 Z170F 气门室盖 Valve case cover packing	A-49 R175N 下水箱 Lower water tank	A-50 R175A 气缸罩总成 Cylinder cover	A-51 R175N 支架 Bracket	A-52 R175A 平衡块 Balance block
							
A-29 R175N 散热器 Radiator	A-30 R175A 油箱盖 Fuel tank cap	A-31 R175A 呼吸器 Breather	A-32 R175A 机滤 Oil filter	A-53 R175A 油泵总成 Fuel injection pump	A-54 R175A 起动轴 Starting shaft	A-55 R175A 曲轴 Crankshaft	A-56 R175A 活塞 Piston
							
A-33 R175A 气门锁夹 Valve collect	A-34 R175A 起动主动(从动)齿轮 Main shaft driving gear	A-35 R175A 水漏斗 Water funnel	A-36 R175A 消声器总成 Silencer	A-57 R175A 齿轮室盖 Gear case cover	A-58 R175N 大皮带轮 V-belt pulley	A-59 R175A 油标尺 Oil rule	A-60 R175A 浮筒 Float cylinder
							
A-37 广济 R175 机油管 Lubricating oil pipe	A-38 R175A 机体 Cylinder block	A-39 R175A 空滤总成 Air filter assembly	A-40 R175A 气门推杆 Valve push rod	A-61 R175A 气门导管 Valve guide	A-62 R175A 活塞销 Piston pin	A-63 R175A 调速衬套 Governor bush	A-64 R175A 喷油器总成 Fuel injector assembly
							
A-41 R175A 摇臂固定螺栓 Rocker arm bolt	A-42 R175A 连杆螺丝 Connecting rod bolt	A-43 R175A 油箱 Fuel tank	A-44 R175A 水箱 Water tank	A-65 R175A 主轴盖 main bearing cover	A-66 EM185 平衡轴 Balance shaft	A-67 R175A 连杆 Connecting rod	A-68 R175A 摇把 Starting crank handle





							
A-69 R175A 缸头螺丝及帽 Cylinder head stud & nut	A-70 R175A 平衡块螺栓 Balance block stud	A-71 R175A 气门调整螺栓 Valve governor bolt	A-72 R175A 飞轮平键 Flywheel key	A-93 R175A 平衡块锁片 Balance block collect	A-94 R175A 操纵手柄总成 Controlled handle assembly	A-95 R175A 吊环 Lifting eye-nut bolt	A-96 R175A 凸轮平键 Camshaft flat key
							
A-73 R175N 涨紧轮总成 Tension pulley	A-74 R175A 汽缸床 Cylinder head gasket	A-75 R175A 摇比总成 Rocker arm assy	A-76 R175A 空滤芯子 Air filter element	A-97 R175A 连杆瓦 Connecting rod bearing shell	A-98 R175A 主盖挡板 Main cover	A-99 R175A 活塞环 Piston ring	A-100 R175A 飞轮螺母 Flywheel nut
							
A-77 R175A 连杆衬套 Connect rod bushing	A-78 R175A 摇比铜套 Rocker arm bushing	A-79 R175A 放水开关 Water drain	A-80 R175A 气门顶柱 Valve tappet	A-101 R175A 连杆锁片 Connecting collect	A-102 EM185 飞轮 Fly wheel	A-103 EM185 汽缸盖总成 Cylinder head assembly	A-104 EM185 缸罩 Cylinder cover
							
A-81 R175A 飞锤总成 Fly-hammer assembly	A-82 R175A 机油泵 Oil pump	A-83 R175A 上体 Upper block	A-84 R175A 下体 Lower block	A-105 EM185 起动衬套 Starting shaft bushing	A-106 EM185 指示器 Oil indicator	A-107 EM185 柴滤 Filter assembly	A-108 EM185 摇臂座 Rocker arm seat
							
A-85 R175A 缸套 Cylinder liner	A-86 R175A 甩油圈 Oil splash ring	A-87 R175A 指示器 Oil indicator	A-88 R175A 气门弹簧 Valve spring	A-109 EM185 皮带轮 V-belt pulley	A-110 EM185 缸套 Cylinder liner	A-111 EM185 活塞 Piston	A-112 EM185 消声器总成 Silencer
							
A-89 R175A 减压总成 Decompressure assembly	A-90 R175A 调速拉簧 Governor spring	A-91 R175N 螺栓(53mm)(38mm) Bolt(53mm 38mm)	A-92 R175N 连接螺丝 Connecting stud	A-113 EM185 气门 Valve	A-114 EM185 凸轮轴 Camshaft	A-115 EM185 连杆瓦 Connecting rod shell	A-116 EM185 摇把 Starting crank handle



◆ DIESEL ENGINE SPARE PARTS (S195 S1100 S1105 S1110 S1115 ZS1125 ZS1130)

			
A-117 EM185 大皮带轮 V-belt pulley	A-118 EM185 齿轮室盖 Gear case cover	A-119 EM185 皮带轮 V-belt pulley	A-120 EM185 摇臂总成 Rocker arm assy
			
A-121 EM185 齿轮 Camshaft gear	A-122 EM185 机油网 Lubricating oil screen	A-123 EM185 齿轮 Camshaft gear	A-124 EM185 齿轮 Camshaft gear
			
A-125 EM185 机油管 Lubricating oil pipe	A-126 EM185 高压油管 High pressure fuel pipe	A-127 EM185 气门推杆 Valve push rod	A-128 EM185 调速拉簧 Governor spring
			
A-129 EM185 封水圈 Water seal ring	A-130 EM185 油底壳垫 Oil sump packing	A-131 EM185 后盖垫 Rear cover packing	A-132 EM185 齿盖垫 Camshaft cover packing
			
A-133 EM185 起动齿轮 Starting gear	A-134 EM185 曲轴齿轮 Crankshaft gear	A-135 EM185 平衡块 Balance block	A-136 EM185 喷油器总成 Fuel injector assy
			
A-137 EM185 头灯总成 Head light assy	A-138 EM185 呼吸器 Breather	A-139 EM185 连杆瓦 Connecting rod shell	A-140 EM185 活塞环 Piston ring

			
B-01 S195 机体 Cylinder block	B-02 S195 油漆水箱 Water hopper	B-03 S195NL 油漆油箱 Fuel tank	B-04 S195 齿轮室盖 Gear case cover
			
B-05 S195 飞轮带齿圈 Flywheel with ring	B-06 S195 飞轮 Flywheel	B-07 S195 气缸罩 Cylinder head cover	B-08 S195 曲轴 Crankshaft
			
B-09 S195 起动齿轮 Starting gear	B-10 S195 调速齿轮 Governor gear	B-11 S195 气门导管 Valve guide	B-12 S195 活塞销 Piston pin
			
B-13 S195 缸头螺栓 Head cylinder bolt	B-14 ZS195 活塞 Piston	B-15 S195 进排气门 IN/EX valve	B-16 S195 减压总成 Decompress assembly
			
B-17 S195 连杆瓦 Connecting rod bearing shell	B-18 S195 连杆衬套 Connect rod bushing	B-19 S195 消声器 Silencer	B-20 S195 气门内外弹簧 Inner/outer valve spring

							
B-21 S195 摇臂总成 Rocker arm assy	B-22 S195 机油泵总成 Lubricating oil pump	B-23 S195 主轴承盖 Main bearing cover	B-24 S195 闪光红漏斗 Funnel	B-45 S195 排气管 Exhaust pipe	B-46 1125 排气管 Exhaust pipe	B-47 S1110 排气管 Exhaust pipe	B-48 S1110 进气管 Intake pipe
							
B-25 S195 水箱盖 Water tank cover	B-26 S195 散热器 Radiator	B-27 S1100 三级空滤总成 Air filter assembly	B-28 S195 空滤 Air filter	B-49 S195 摇臂座 Rocker arm seat	B-50 S195 油箱开关座 Fuel tank switch seat	B-51 凸轮轴盖 Camshaft cover	B-52 S195 摇臂短栓 Rocker arm short bolt
							
B-29 S195 后盖 Rear cover	B-30 S195 主轴瓦 Main bearing shell	B-31 S195 凸轮轴承前衬 Camshaft front bushing	B-32 S195 油箱盖 Fuel tank cover	B-53 S195 凸轮轴 Camshaft	B-54 S1110 柴滤 Fuel filter assy	B-55 S195 曲轴油封 50x80x12 Crankshaft oil seal	B-56 S195 气门弹簧座 Valve spring seat
							
B-33 S195 细滤 Fine fuel filter	B-34 S195 空滤芯 Air filter	B-35 S195 调速支架 Governor ball spacer	B-36 S195 浮筒 Float cylinder	B-57 S195 平衡轴 Balance shaft	B-58 空心螺栓 Hollow stay bolt	B-59 S195 摇臂长螺栓 Rocker arm long bolt	B-60 90W 飞轮发电机 Flywheel alternator
							
B-37 S195 气门座圈 IN/EX valve seat	B-38 S195 输油管总成 Fuel delivery pipe	B-39 S195 汽缸盖 Cylinder head	B-40 S195 调速杠杆总成 Governor lever assembly	B-61 S195 启动轴 Starting gear shaft	B-62 S195 呼吸器 breather	B-63 S195 调速轴 governor shaft	B-64 S195 摇手 Starting crank handle
							
B-41 S195 调速手柄 Speed-control lever knob	B-42 S195 回油管 Fuel return pipe	B-43 S195 柴油管 Fuel pipe	B-44 S195 机油管 Lubricating oil pipe	B-65 S195 张紧轮 tension pulley assy	B-66 S195 新式输油管 Fuel delivery pipe(new)	B-67 S195 活塞环总成 Piston ring	B-68 SQ192 摇手 Starting crank handle

B-69 S195 水泵 (4 孔) Water pump	B-70 S195GN 头灯罩 Head-Light cover	B-71 S195 闪光红漏斗 Funnel	B-72 S195 机油滤总成 Oil filter assembly	B-93 S195 平衡轴齿轮 Balance shaft gear	B-94 S195 凸轮轴齿轮 Camshaft gear	B-95 S1110 水泵 (3 孔) Water pump	B-96 S195 机滤网 Oil filter screen
B-73 S195 出油管弯 Delivery bend	B-74 S1110 呼吸器 Breather	B-75 S195 油底壳垫 Oil sump packing	B-76 S195 机油泵垫 Lubricating oil pump packing	B-97 S195 柱塞偶件 Plunger and barrel	B-98 S195 出油阀偶件 Delivery valve	B-99 S195 后衬 Rear bushing	B-100 S195 喷油泵 Fuel injection pump
B-77 S195 平衡轴盖垫片 Balance shaft cover packing	B-78 S195 吊环垫 Lifting eye-nut packing	B-79 S195 水箱垫 Hopper packing	B-80 S195 油箱开关座垫 Fuel cock washer	B-101 S195 机油指示器总成 Oil indicator assembly	B-102 S195 喷油器总成 Fuel injector assy	B-103 EM185 启动从动齿轮 Main shaft driving gear	B-104 S195 放水开关 (3/8) Water drain switch
B-81 S195 喷油泵垫 Fuel injection pump packing	B-82 上盖垫 Upper cover packing	B-83 S195 水箱垫 (上) Hopper packing	B-84 S195 主轴承盖垫 Main bearing cover packing	B-105 S195 调速拉簧 Governor spring	B-106 S195 吊杆 Lifting lever	B-107 S195 油标尺 Oil rule	B-108 S195 消声器螺帽 Silencer bolt
B-85 S195 后盖垫 Rear cover packing	B-86 S195 缸罩垫 head cover packing	B-87 S195 凸盖垫 Camshaft cover packing	B-88 S195 排气垫 Exhaust pipe packing	B-109 S195 泵油板手座 Fuel priming handle seat	B-110 S195 加长排气管 Exhaust pipe(long)	B-111 硅整流电机 Silicon rectification generator	B-112 调节器 Regulator (90W/150W/300W)
B-89 S195 机油泵垫 Lubricating oil pump packing	B-90 S195 齿轮室盖垫 Gear casing gasket	B-91 S195 进气管垫片 Intake pipe packing	B-92 S195 粗滤 Primary fuel filter	B-113 点火开关 Ignition switch	B-114 油嘴偶件 Nozzle	B-115 S195 刚垫 Cylinder Head Gasket	B-116 全套垫片 GASKET SET

◆ **JIANGDOND ENGINE SPARE PARTS**

(JD300 JD330 JD350 ZH1133 ZH1130 ZH1125)



			
C-01	C-02	C-03	C-04
			
C-05	C-06	C-07	C-08
			
C-09	C-10	C-11	C-12
			
C-13	C-14	C-15	C-16
			
C-17	C-18	C-19	C-20

◆ **CHANGFA
CHANGCHAI ORIGINAL SPARE PARTS**

(CFZS1130 CFZS1125 L28 L32)



			
D-01	D-02	D-03	D-04
			
D-05	D-06	D-07	D-08
			
D-09	D-10	D-11	D-12
			
D-13	D-14	D-15	D-16
			
D-17	D-18	D-19	D-20

◆ **CHANGFA
CHANGCHAI ORIGINAL SPARE PARTS**
(CF33 CF36 HS400)



E-01	E-02	E-03	E-04
E-05	E-06	E-07	E-08
E-09	E-10	E-11	E-12
E-13	E-14	E-15	E-16
E-17	E-18	E-19	E-20

E-21	E-22	E-23	E-24
E-25	E-26	E-27	E-28
E-29	E-30	E-31	E-22

◆ **ALTERNATOR & ELECTRIC MOTOR SPARE PARTS 2KW-20KW**



F-01	F-02	F-03	F-04
F-05	F-06	F-07	F-08

◆ **MUITICYLINDER ENGINE PARTS**

(295A, 2100, 2105)

CHANGCHAI ZN490B DONGFENG 495A WEICHA

195D6, K4100,K4102, LR4105,LR6105 DEUTZ B226

TD622 CUMMINS 4114 CUMMINS 6BT



			
G-01	G-02	D-03	G-04
			
G-05	D-06	G-07	G-08
			
G-09	G-10	G-11	G-12
			
G-13	G-14	G-15	G-16
			
G-17	G-18	G-19	G-20

			
G-21	G-22	G-23	G-24
			
G-25	G-26	G-27	G-28
			
G-29	G-30	G-31	G-32
			
G-33	G-34	G-35	G-36
			
G-37	G-38	G-39	G-40
			
G-41	G-42	G-43	G-44